

10ml bottle specially designed for repair and service centers


Preparation of the support before use

Before Fixodrop treatment, all parts must be cleaned and dried. This step is important and strongly influences the epilame efficiency.

Fixodrop-treated anchor pallets might be easily lubricated after running dry for few minutes.

Utilisation

Step 1

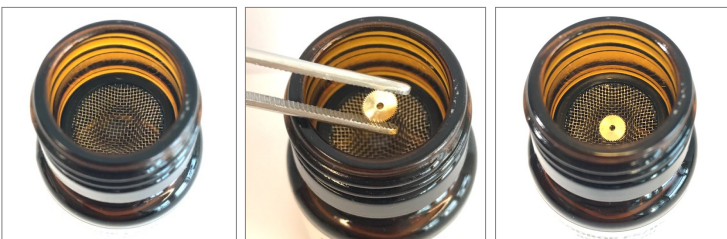

- ◆ Place the parts on the filter inside the bottle.

Step 2



- ◆ Close the cap.
- ◆ Turn the bottle upside down for 30 seconds, shaking lightly, so that the parts are well immersed.
- ◆ Turn the bottle right side up and slightly tilt it to one side before opening, so that the liquid flows out well.

Step 3



- ◆ After immersion, allow the parts to drain before collecting them, then dry them, preferably by a stream of hot air at about 60 °C.
- ◆ This treatment is necessary to guarantee a good homogeneity of the coating and the aesthetics of the parts.

Advice

In order to avoid uncontrolled loss of the diluent through evaporation, the Fixodrop bottle should be closed immediately after each use.

Storage

Moebius products should be stored in their original packaging, protected from light, in a clean and dry place and at an ideal temperature of 15-26°C.

After opening we recommend keeping the products for a maximum of 12 months.

